


FLEET ENGINEERS

1800 EAST KEATING AVENUE
MUSKEGON, MI 49442
PH: 1-800-333-7890 • F: 231-777-2720


Installation Sheet #INS-04032

Spray Suppression Brush Installation Instructions for Spray Master® Fenders

- 1) Place the fender in an inverted position on a soft non-marking surface.
- 2) Start by inserting the brush at one end of the channel on the fender skirt, 1-3/8" from the end of the fender. Make sure that the mounting tab does not extend past the radius on the end of the fender.

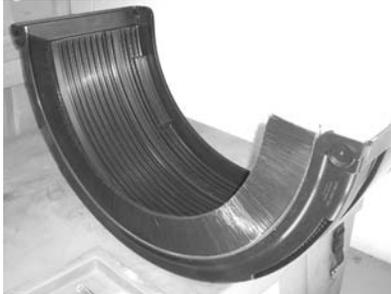

- 3) When the brush is located in the channel, check to make sure that it is spaced evenly. Then push into place using a large flat blade screwdriver or similar tool. Starting at the center of the brush, push on the edge of the metal backing. Continue to work towards the ends.

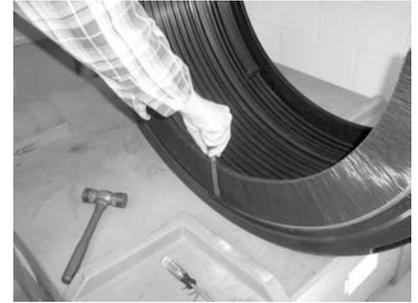

- 4) When the brush is in place, fasten it through the holes in the mounting tabs with the provided self-taping screws. Be careful not to over tighten!



This product may not fit all truck models or types of suspensions. Check truck or trailer manufacturer for suspension travel specifications. Modifications to the brackets and/or the fenders may be required. Any modifications are at the discretion, responsibility and risk of the installer.